
OpenFOAM homework

OpenFOAM is the most popular open-source CFD program in the world today. In this homework we will use the program to determine the coefficient of discharge for a broad-crested spillway.

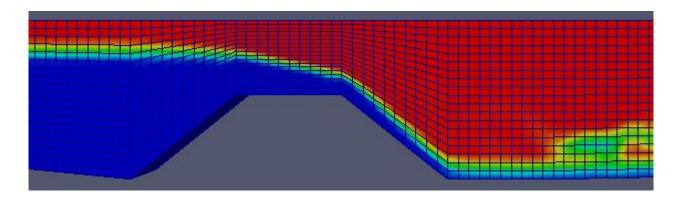

OpenFOAM is considered to be a difficult program to learn. This is partially due to that it is designed to run on *Linux*, and partly that the grid generation tools are complicated. In the current homework, we will use a Windows version of *OpenFOAM*. Instead of using the *OpenFOAM* grid editor, *snappyHexMesh*, we will use *SSIIM 2*. This will make the learning curve less steep, and hopefully make it possible to finish the homework in a reasonable time (around 3-10 hours).

The homework is divided into different parts, which should be carried out sequentially.

1. Installation of blueCFD

BlueCFD is an OpenFOAM version for Windows. It can be downloaded from http://code.google.com/p/bluecfd-singlecore/. The download can be done by clicking on the left side of the page: blueCFD-SingleCore-2.0-1-setup.exe. Download the program and install it. It is possible to install newer versions, but there have been some problems with these versions, so it is recommended to use version 2.0-1.

The post-processor in *OpenFOAM* is called *ParaView*. This can be downloaded from *http://www.paraview.org*. The OpenFOAM window calls ParaView through a file called *Para-Foam.bat*. To make ParaView accessible when the file is called, you can add the following line at the top of the *ParaFoam.bat* file: *set PATH=%PATH%*; *c:\Program Files\ParaView 3.4.12\bin*

This will only work if you have installed *ParaView* version 3.4.12 in the directory *Program Files*. If you have installed another version in another directory, you have to modify the line accordingly.

The *ParaFoam.bat* file is found in the directory

c:\Program Files\blueCFD-SingleCore-2.0\OpenFOAM-2.0\bin.

2. Running a tutorial

After installation, you have a program *blueCFD-SingleCore-2.0* installed on your PC. Click on the program, and on the directory *OpenFOAM*, and choose the option *OpenFOAM Users Guide*. This is a PDF file. You can start with running the *Dam Break* tutorial, described in Chapter 2.3 in the *Users Guide*. The tutorial is carried out by opening the *Command Line with ming-w32 DP*, which is in the *blueCFD-SingleCore-2.0* program. This command prompt is used to start the *OpenFOAM* solvers, grid generators and post-processing programs.

In the command prompt, use the command *cd* to go to the directory: *OpenFOAM-2.0 -> tutorials -> multiphase -> interFoam -> ras*. Copy the input files using the command

 $xcopy / S damBreak c: \damBreak \$.

Answer D on the question about the directory. After the files are copied, go to the root directory with the command cd \. Then start the grid generator by the command

blockMesh -case damBreak

After the grid is made, initiate the variables with the command

setFields -case damBreak

Then do the computation by writing the command


interFoam -case damBreak

The program then runs for a while. After it has stopped, view the result by the command

paraFoam -case damBreak

After the *ParaFoam* window opens, click on the green button *Apply*. Then click on the box where it says *p*, and choose *alpha1*. Then click on the triangular green "play" button at the top of the menu.

The buttons are circled in the figure on the next page, where also the order they should be pushed is given with numbers.

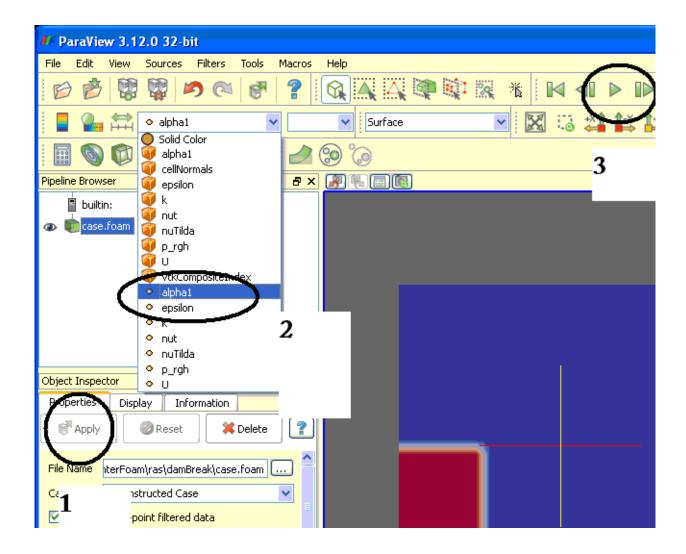


3. Making the grid for the spillway

One of the most effective ways of learning new computer programs is to run a tutorial and modify it so that it fits the problem we want to solve. We will modify the *damBreak* tutorial so that it contains the grid of the spillway. The spillway will be made with *SSIIM 2*.


First, install *SSIIM 2* on your computer. It can be downloaded from the web page *http://folk.ntnu.no/nilsol/ssiim*. Choose the latest 32 bits version. Remember to download the DLL files and unzip these in the same directory as you used for the executable. You may for example use the directory *c:\ssiim*. Make a control file, and add the following options:

F 87 0.02 uniform distribution of vertical cells F 159 0 0 0 1 0 0 2d grid allowed G 1 100 11 21 1 allocation of arrays

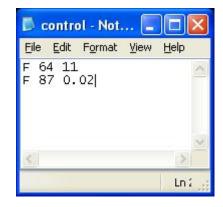


Note that the control file must not have any .txt or other extension. If the file has a .txt extension, it has to be renamed.

Then start the program. A window comes up. Go to the menu option *View -> GridEditor*. We now make the plan view of the grid, which will be a channel that is 8 meters long and 1 meter wide. Click on *Blocks -> Add block*, and then click on four points in the white area, roughly where the four corners of the channel is. In plan view. No accuracy needed here. The points have to be given clockwise, otherwise an error message is given. After you see the green outline of the channel, choose the menu option *Blocks -> Size block*. Choose 81 lines in i-direction and 2 in j-direction. Then move the four corners to their exact points. This is done by first clicking on one point and then choosing the menu option *Define -> Give coordinates*. Give the coordinates (0,0), (0,1), (8,1) and (8,0). Then choose the menu option *Generate -> boundary*. The outline of the channel is then given.

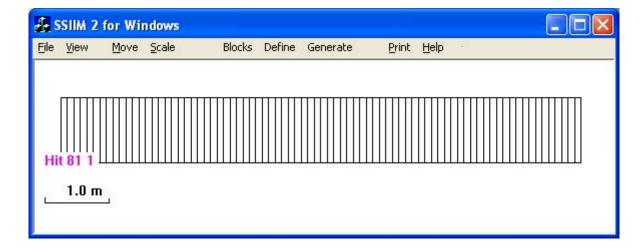


Next, we want to make the geometry of a broad-crested weir (http://folk.ntnu.no/nilsol/cases/langkronet). First, choose in the menu View -> Legend. This shows the grid line numbering. Then choose in the menu Define -> NoMovePoints mode. Click on the grid line intersections for lines i=25, i=35, i=45 and i=55. Note that there are two intersection for each i. So you will get 8 blue markers on the grid. If you make a mistake, choose the menu option Define -> Delete NoMove-

Point. After this is ok, choose the menu option *Define -> SetNoPointMode*. This will allow you to click on the grid without adding new *NoMovePoints*.

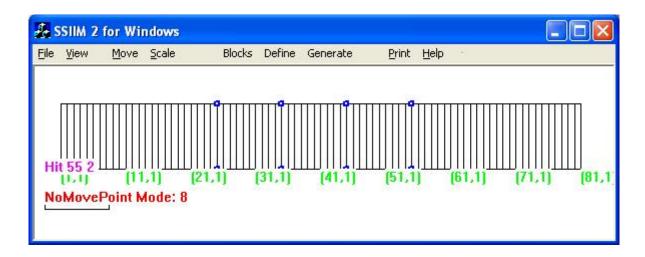

Then we will give an elevated level for the crest of the weir. This is done by clicking on the four central blue *NoMovePoints*, and giving a level by the menu option *Define -> Give coordinates*. Choose the z level 0.6 meters. Afterwards, choose the menu option *Generate -> Boundary*. This creates straight lines between the NoMovePoints. Then choose *Generate -> 3D grid*. Save the grid by choosing *File -> Write unstruc file*. End the program and restart it. Choose the menu option *File -> Read unstruc file*. You can see the grid by choosing *View -> ProfileI*.

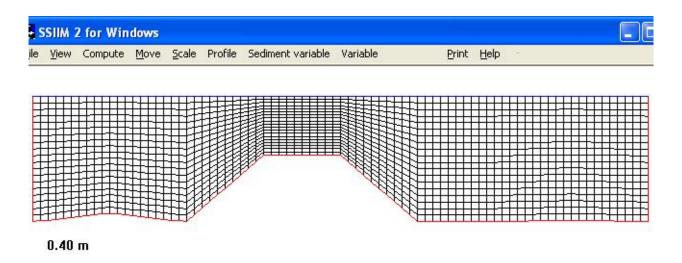

Before making the OpenFOAM files, the discharge in and out have to be defined. This is done by *View-> DischargeEditor*. The grid seen from above emerges. Choose *Side Discharge -> Choose Group ->* 1. Then *Side Discharge -> Give values*. A dialog box emerges, where the water discharge is specified in m³/s. Give a value of 1.0 for the inflow discharge. Then choose *OK*. Then click with the mouse on the left sides of the channel, at section 1. Once clicked, the lines change

colour. Then choose *Side Discharge -> Choose Group ->* 2. Then *Side Discharge -> Give values*. In the dialog box, click on the *Inflow* button. This specifies an outflow of the geometry. Give a value of 1.0 for the discharge. Then choose *OK*. Then click on the right side of the grid and see this section change colour. Then save the *unstruc* file again and end the program.

4. Making the input files for *OpenFOAM*.

The general idea now is to make the grid and boundary files for the SSIIM 2 geometry and copy these into the directory of the *damBreak* tutorial. First, edit SSIIM 2's control file and add the data set *F 298 0 1.0e20 0.24*. Restart SSIIM 2 and read the unstruc file. Note that version 142 or later must be used. Then choose on the menu *File -> Write OpenFOAM files*. This will make the Open-FOAM grid files and boundary files. Copy the *blockMeshDict file* from the *ssiim* directory to the directory *damBreak\constant\polymesh*. Copy the files *U, alpha1, k, epsilon, p_rgh* and *nut* to the directory *damBreak\0*. You have to specify the inflow and outflow water velocity in the *U* file. Edit the *U* file and give an inlet velocity of 0.4 m/s, instead of the default 0.3. Also, you need to specify the outlet velocity. This is done by using the continuity equation and the inflow and outflow areas given at the top of the file. Divide the *inlet* area with the *outlet1* area. Multiply this with 0.4 and give this number as the velocity in the *outlet1* boundary field. Use many decimals, otherwise the program will give a continuity error. Set the *outlet2* velocity to zero. The *outlet1* area is lower than *outlet2*, so this will prevent high downstream water levels. The last value on the *F 298* data set in the SSIIM 2 *control* file is the level between the two outlet areas.

5. Running OpenFOAM

Open the command prompt from blueCFD-SingleCore-2.0 as for the tutorial, and do the same commands for grid generation, running the program and post-processing. Before you do this, you need to edit the gravity file called g, to get the gravity to be in the z direction instead of the y direction. Use the Wordpad for doing this. The g file is located in the damBreak/constant directory. Change the vector (0 -9.81 0) to (0 0 -9.81).

If you want to make the program run for a longer time, you have to increase the running time by editing the *controlDict* file in the *damBreak/system* directory.

If you encounter the error "pRefCell or pRefValue not found" when running interFoam, then you need to add some data to an input file. In the directory damBreak/system, there is a file called fvSolution. Open this file in an editor, for example WordPad. In the file, there is a section called PIMPLE. In the brackets enclosing this section, add the following two lines:


```
pRefCell 0
pRefValue 0
```

Save the file and try running the *interFoam* again.

If you get error messages for files that we are not using, for example *alpha1.org* and *nuTilda*, then delete these files.

When looking at the results with *paraFoam*, you may have to rotate the figure with the mouse, or use one of the buttons on the menu to see the spillway from the side. Also, you may need to rescale the colours. Choose the variable *U* first and then *alpha1*.

6. Determining the coefficient of discharge

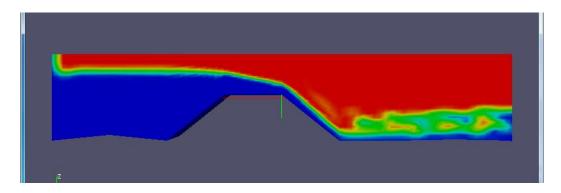

OpenFOAM computes the water fraction in each cell, which is given by the parameter alpha1. The coefficient of discharge can be computed from the water discharge and the water level behind the weir. The water discharge is given as the inflow velocity times the inflow area. The water level behind the weir is more problematic to find. Approximate values can be taken from the graphics. For more accurate values, it is necessary to find where the line of alpha1 = 0.5 is located. This must be interpolated from values in the grid. To facilitate this interpolation, SSIIM writes a file called levels, which gives the cell number and its level in all the grid cells. This file can be taken into a spreadsheet, together with the alpha1 values at the last time step from Open-FOAM. The values from the alpha1 file and levels file will correspond. A figure showing the alpha1 file in WordPad is given at the end of this document. Viewing the graphics of cell numbers in SSIIM simultaneously as the paraFoam graphics, enables a rough choice of cells where alpha1 = 0.5 is located. The more accurate value can then be interpolated using the spreadsheet with the levels/alpha1 values. '


The figure on the next page shows the cell numbers for the grid as given by SSIIM 2.

19	38	57	76	95	114	133	152	171	190	209	228	247	260
18	37	56	75	94	113	132	151	170	189	208	227	246	265
17	36	55	74	93	112	131	150	169	188	207	226	245	264
16	35	54	73	92	111	130	149	168	187	206	225	244	263
15	34	53	72	91	110	129	148	167	186	205	224	243	262
14	33	52	71	90	109	128	147	166	185	204	223	242	261
13	32	51	70	89	108	127	146	165	184	203	222	241	260
	31	50	69	88	107	126	145	164	183	202	221	240	259
-+	74.53	49	68	87	106	125	144	163	182	201	220	239	258
-+		48	67	86	105	124	143	162	181	200	219	238	257
_	20020	2	66	85	104	123	142	161	180	199	218	237	256
-+	-	-	65	84	103	122	141	160	179	198	217	236	255
-+	30.00	+	64	83	102	121	140	159	178	197	216	235	254
-+	-			82	101	120	139	158	177	196	215	234	253
				 81	100	119	138	157	176	195	214	233	252
_5				80	99	118	137	156	175	194	213	232	251
_4					98	117	136	155	174		212	231	250
3					97	116	135	154			211	230	249
_2	†				96	115	134	153	172	191	210	229	248
	18 17 16 15 14 13 12 11 10 9 8 7 6 5 4 3	18 37 17 36 16 35 15 34 14 33 13 32 12 31 11 30 10 29 9 28 8 27 7 26 6 25 5 24 4 23 3 22	18 37 56 17 36 55 16 35 54 15 34 53 14 33 52 13 32 51 12 31 50 11 30 49 10 29 48 9 28 47 8 27 46 7 26 45 6 25 44 5 24 43 4 23 42 3 22 41 2 21 40	18 37 56 75 17 36 55 74 16 35 54 73 15 34 53 72 14 33 52 71 13 32 51 70 12 31 50 69 11 30 49 68 10 29 48 67 9 28 47 66 8 27 46 65 7 26 45 64 6 25 44 63 5 24 43 62 4 23 42 61 3 22 41 60 2 21 40 59	18 37 56 75 94 17 36 55 74 93 16 35 54 73 92 15 34 53 72 91 14 33 52 71 90 13 32 51 70 89 12 31 50 69 88 11 30 49 68 87 10 29 48 67 86 9 28 47 66 85 8 27 46 65 84 7 26 45 64 83 6 25 44 63 82 5 24 43 62 81 4 23 42 61 80 3 22 41 60 79 2 21 40 59 78	18 37 56 75 94 113 17 36 55 74 93 112 16 35 54 73 92 111 15 34 53 72 91 110 14 33 52 71 90 109 13 32 51 70 89 108 12 31 50 69 88 107 11 30 49 68 87 106 10 29 48 67 86 105 9 28 47 66 85 104 8 27 46 65 84 103 7 26 45 64 83 102 6 25 44 63 82 101 5 24 43 62 81 100 4 23 42 61 80 99 3 22 41 60 79 98 <	18 37 56 75 94 113 132 17 36 55 74 93 112 131 16 35 54 73 92 111 130 15 34 53 72 91 110 129 14 33 52 71 90 109 128 13 32 51 70 89 108 127 12 31 50 69 88 107 126 11 30 49 68 87 106 125 10 29 48 67 86 105 124 9 28 47 66 85 104 123 8 27 46 65 84 103 122 7 26 45 64 83 102 121 6 25 44 63 82 101 120 5 24 43 62 81 100	18 37 56 75 94 113 132 151 17 36 55 74 93 112 131 150 16 35 54 73 92 111 130 149 15 34 53 72 91 110 129 148 14 33 52 71 90 109 128 147 13 32 51 70 89 108 127 146 12 31 50 69 88 107 126 145 11 30 49 68 87 106 125 144 10 29 48 67 86 105 124 143 9 28 47 66 85 104 123 142 8 27 46 65 84 103 122 141 7 26 45 64 83 102 121 140 6 25	18 37 56 75 94 113 132 151 170 17 36 55 74 93 112 131 150 169 16 35 54 73 92 111 130 149 168 15 34 53 72 91 110 129 148 167 14 33 52 71 90 109 128 147 166 13 32 51 70 89 108 127 146 165 12 31 50 69 88 107 126 145 164 11 30 49 68 87 106 125 144 163 10 29 48 67 86 105 124 143 162 9 28 47 66 85 104 123 142 161 8 27 46 65 84 103 122 141 160	18 37 56 75 94 113 132 151 170 189 17 36 55 74 93 112 131 150 169 188 16 35 54 73 92 111 130 149 168 187 15 34 53 72 91 110 129 148 167 186 14 33 52 71 90 109 128 147 166 185 13 32 51 70 89 108 127 146 165 184 12 31 50 69 88 107 126 145 164 183 11 30 49 68 87 106 125 144 163 182 10 29 48 67 86 105 124 143 162 181 9 28 47 66 85 104 123 142 161 180 <	18 37 56 75 94 113 132 151 170 189 208 17 36 55 74 93 112 131 150 169 188 207 16 35 54 73 92 111 130 149 168 187 206 15 34 53 72 91 110 129 148 167 186 205 14 33 52 71 90 109 128 147 166 185 204 13 32 51 70 89 108 127 146 165 184 203 12 31 50 69 88 107 126 145 164 183 202 11 30 49 68 87 106 125 144 163 182 201 10 29 48 67 86 105 124 143 162 181 200 9	18 37 56 75 94 113 132 151 170 189 208 227 17 36 55 74 93 112 131 150 169 188 207 226 16 35 54 73 92 111 130 149 168 187 206 225 15 34 53 72 91 110 129 148 167 186 205 224 14 33 52 71 90 109 128 147 166 185 204 223 13 32 51 70 89 108 127 146 165 184 203 222 11 30 49 68 87 106 125 144 163 182 201 220 10 29 48 67 86 105 124 143 <t< td=""><td>18 37 56 75 94 113 132 151 170 189 208 227 246 17 36 55 74 93 112 131 150 169 188 207 226 245 16 35 54 73 92 111 130 149 168 187 206 225 244 15 34 53 72 91 110 129 148 167 186 205 224 243 14 33 52 71 90 109 128 147 166 185 204 223 242 13 32 51 70 89 108 127 146 165 184 203 222 241 12 31 50 69 88 107 126 145 164 183 202 221 240 11 30 49 68 87 106 125 144 163 182 201</td></t<>	18 37 56 75 94 113 132 151 170 189 208 227 246 17 36 55 74 93 112 131 150 169 188 207 226 245 16 35 54 73 92 111 130 149 168 187 206 225 244 15 34 53 72 91 110 129 148 167 186 205 224 243 14 33 52 71 90 109 128 147 166 185 204 223 242 13 32 51 70 89 108 127 146 165 184 203 222 241 12 31 50 69 88 107 126 145 164 183 202 221 240 11 30 49 68 87 106 125 144 163 182 201

The coefficient of discharge, C, is computed by using the following formula:

$$Q = CBH^{1.5}$$


where Q is the discharge, B is the width of the spillway and H is the vertical distance from the top of the spillway to the water level behind the spillway.

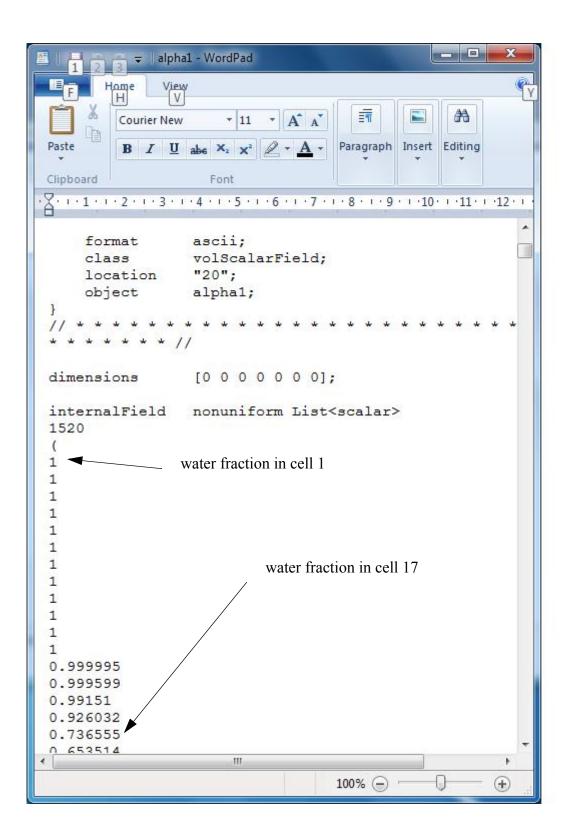

7. Further information


The accuracy of the results may be affected by the number of cells in the grid. It is possible to increase this. The maximum cells in the vertical direction is given on the *G 1* data set in the control file of *SSIIM 2*. It is also possible to investigate other numerical parameters, such as the time step, by modifying the *OpenFOAM* input files. For example the *controlDict* file.

The F 87 data set in the control file of SSIIM 2 decides the distribution of the number of vertical cells as the depth varies. The low value given makes SSIIM 2 generate a grid with equal amount of cells in the vertical direction over the whole channel. The default value of the F 87 data set is 0.7, which gives some wedge cells in the grid. To avoid getting problems with the wedge cells in the OpenFOAM grid, the F 299 1 data set has to be given in the control file of SSIIM 2.

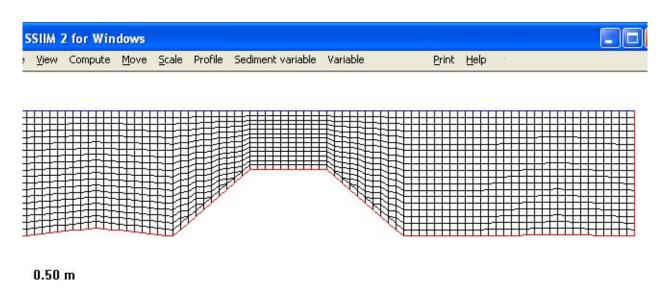


8. Vertical spillway walls

The *F 64 11* option makes the grid follow the ground without any vertical walls. To model flow over a vertical plate, the *F 64 0* option can be used. The grid will then be orthogonal, seen in a longitudinal profile. By giving higher bed levels at two neighbouring cross-sections, a wall will be made.

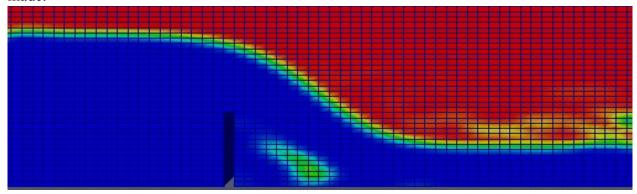

9. Level of top of the grid

The default level of the top of the grid in SSIIM 2 is 1 meter. This can be changed by giving in at least three surface points in the Grid Editor. These points are given by the menu option *Define -> Set surfacepoint*. Clicking with the mouse in the window will define a point. The three first points will form a triangle. Make sure the grid is inside the triangle. Then choose *Generate -> Surface* and *Generate -> 3D Grid*. A new grid is then made with the new top level of the grid.

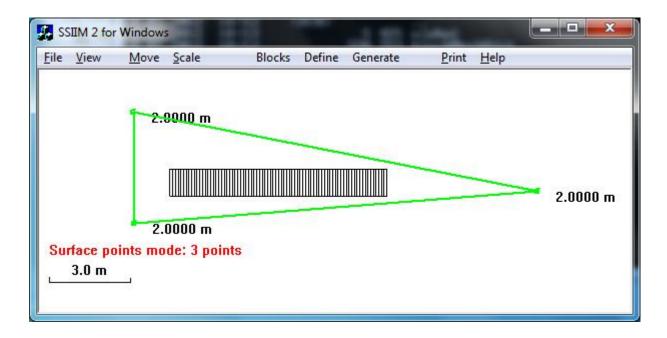

10. Limitations

SSIIM 2 uses an unstructured grid, where it is possible to have varying number of grid cells in the vertical direction, depending on the water depth. This is done by including tetrahedral cells in the grid. Unfortunately, the tetrahedral grid cells seem to be problematic when transferring the grid from SSIIM 2 to OpenFOAM. At least if there is a 3D geometry, instead of a 2D like in the current example.